



## Introduction to Pawfit

Thank you for using Pawfit 2 – the innovative and smart pet location and activity tracking system. Here you will find a system overview and a user manual to help you get started on using Pawfit Voice!

**Contents – How to use the following features: Pawfit Voice.**

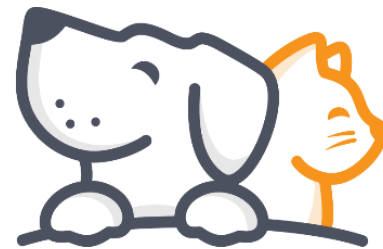

**PAWFIT**  
smarter petcare

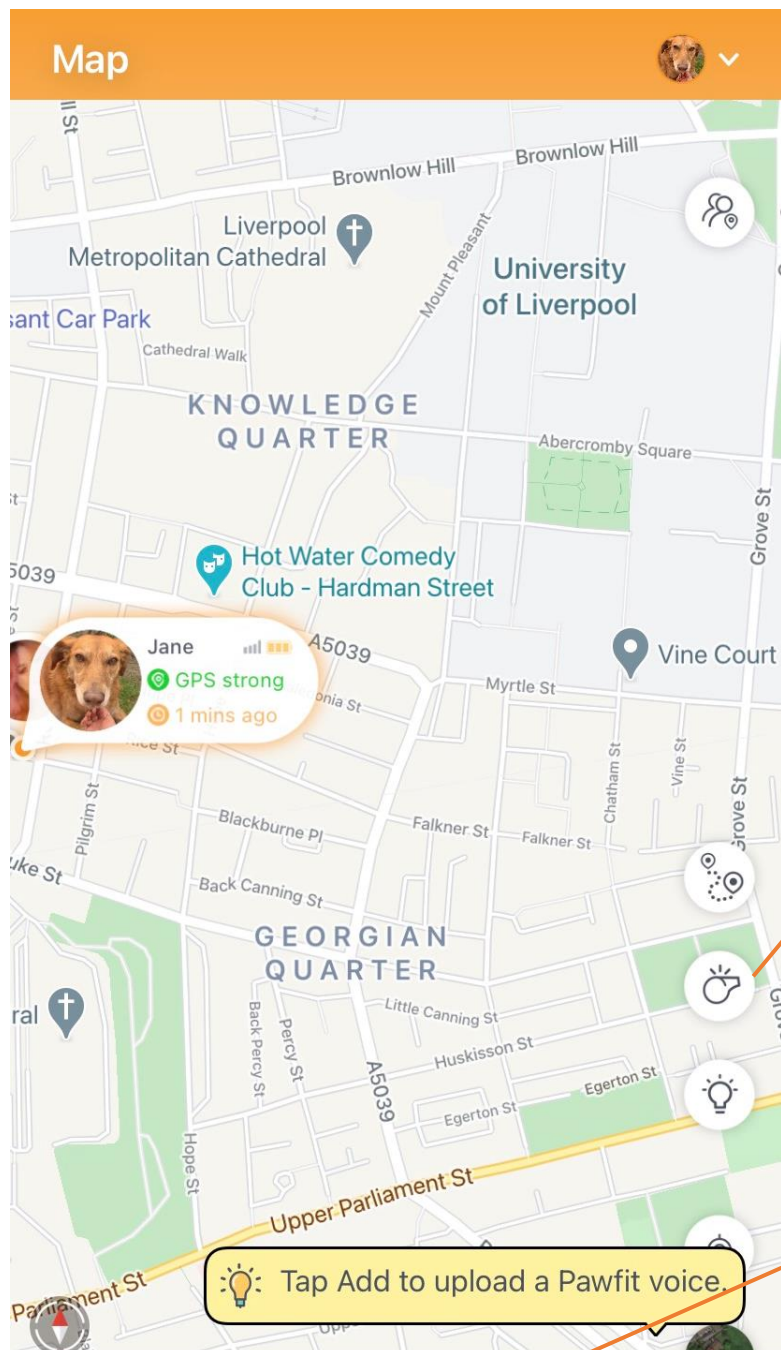

**Pawfit Voice:** Open the Pawfit App, navigate to the Map screen.

On the right-hand side, you will see the whistle icon. This whistle icon will display the alarm option and the option to upload a Pawfit voice.

**Whistle:** Tap the whistle icon and tap 'Add' to upload a Pawfit voice.

**Play:** Select the play icon to directly play your Pawfit Voice for pet recall.

**Add:** Select the add icon to add a Pawfit voice by recording your own commands.

**Record:** Before recording, ensure that your device is turned on and connected.



Record

Please make sure the device is turned on and connected to a network during recording.

**Record:** Record your voice command – ensure to speak loudly to maximise volume. Voice commands can be up to four seconds long.


00.00s

**Microphone:** Tap the microphone to start your recording.


**Delete or confirm:** Tap the X icon to delete a voice command or the tick icon to confirm and save your recording.



**Voice:** Select your voice name such as your Pet's name for voice recall.

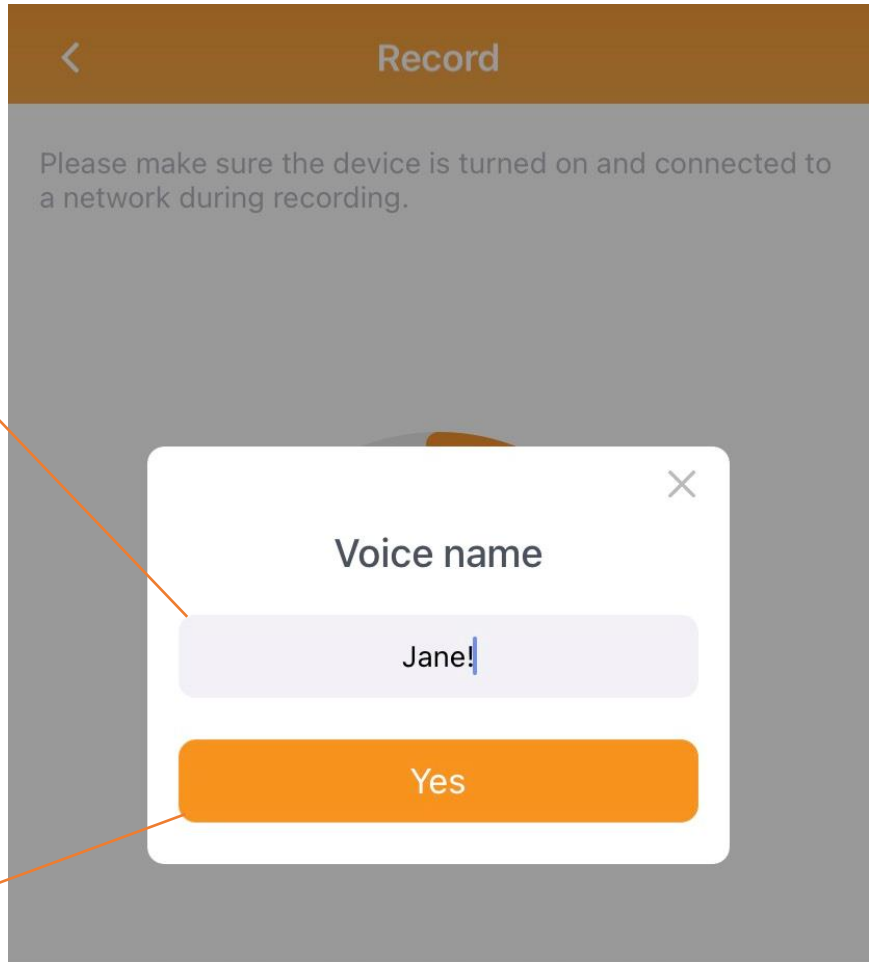


**Select:** Select 'yes' to confirm your Pawfit Voice.

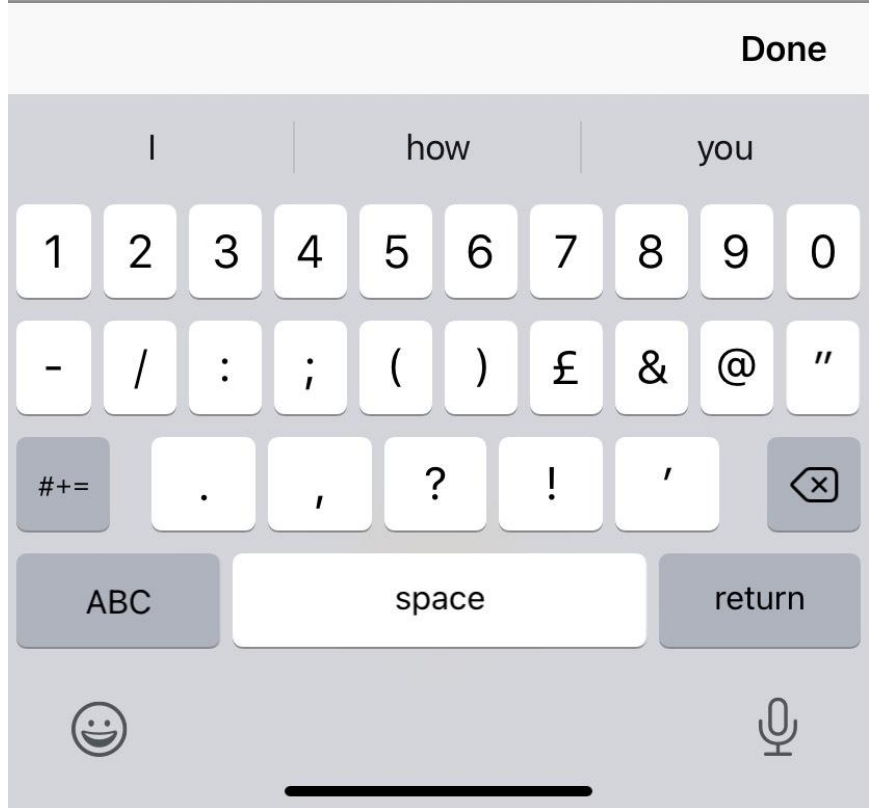


**Settings:** You can also add a Pawfit voice by going to Profile -> Pet Profile -> Advanced Settings.

**Pawfit Voice:** Select 'Pawfit Voice' to access and add a Pawfit Voice.

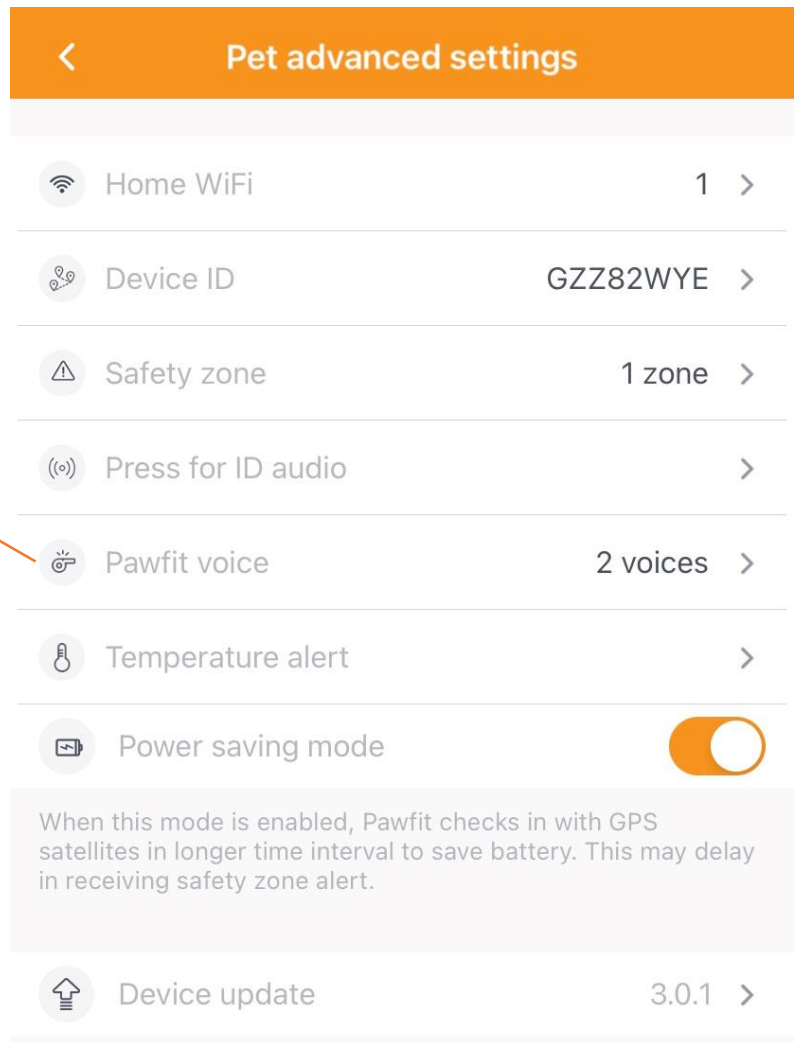

**Add:** Select the + icon to record and add your Pawfit Voice.

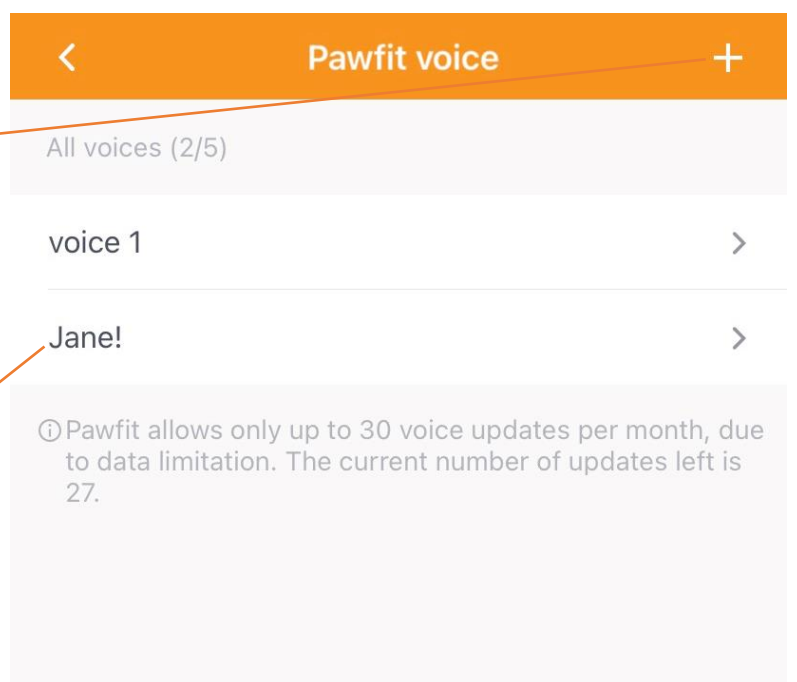

**Select:** Select to rerecord voice commands by tapping the named voice. You can have up to 5 different voice commands.